

# ST-LS1

**ST-LS1** Non-contact water level sensor suitable for non-metallic tanks. Mount the sensor to the wall of the water tank at an appropriate height to monitor the water level and notify the RV owner when the tank is either full or empty. To monitor both levels, 2 sensors should be used.



## WATER LEVEL SENSOR for plastic tanks

